

This manual describes the basic functions of a mobile phone.

The contents of this manual are correct. The description of some features may differ due to changes in the provider's software or services. The Company reserves the right to make changes to the specifications without prior notice.

Important Safety Notes

This phone is designed for making and receiving calls, sending SMS messages, accessing the Internet (if provided), etc.

The following service instructions are intended to help you use your phone correctly, without compromising the safety of people or property, and to keep the device in working order. Please read this section carefully and follow the instructions in it closely.

The phone does not contain substances harmful to health (according to DSTU EN50581).

- Turn off your phone if you are near chemical plants, gas stations, and other places where explosive objects may be present.
- Keep your phone out of the reach of children.
- Turn off your phone while on board, and do not use your phone during the flight.
- Turn off your phone when devices such as pacemakers and other medical equipment that may be affected by the operation of your mobile phone are present.
- The warranty does not apply to non-original spare parts.
- Never attempt to disassemble the phone yourself. If necessary, contact Customer Service.
- Do not charge your phone without a rechargeable battery. Charge your phone in a well-ventilated area and away from flammable and explosive objects.
- To prevent degaussing, keep your phone away from objects such as magnetic disks and credit cards.
- Avoid getting any liquid on your phone. If liquid gets on the

- machine, remove the battery and contact customer service.
- Do not use your phone in areas with very high or very low temperatures. Never leave your phone exposed to direct sunlight, humidity, or dust.
 - Do not wash your phone with water or use liquid detergents.
 - Cordless phones are sensitive to radio interference, which may affect the operation of the device.
 - Use only manufacturer's recommended accessories and batteries.
 - Only use the appliance in normal operating condition as indicated in the instructions.
 - Do not dispose of the battery in a fire!
 - In order to avoid the ingress of heavy metals, acids, alkali into water or soil, which causes significant damage to the environment, dispose of the used battery at the end of its service life in accordance with the requirements of the law. Non-compliance with the norms of the legislation on disposal entails legal liability.
 - Information on the safe disposal of lithium-ion batteries is available from your nearest specialist service center.

Note: The manufacturer of the device reserves the right to complete the device with batteries with characteristics other than those specified.

Specifications

Telephone, frequency bands	GSM 900: 880-915 MHz (Tx), 925-960 (Rx) GSM 1800: 1710-1785 MHz (Tx), 1805-1880 (Rx)
Number of SIMs	2 SIM (miniSIM). Dual SIM Dual Standby Mode
Notice	SMS
Bluetooth, Version,	V3.0, 2400-2483.5 MHz

Frequency Band	
Display	1.77", color LCD, 160*128px
Camera	0.3 MP
Format support	MIDI, AAC, MP3, WAV, JPG
FM Radio	87.5-108.0 MHz (built-in antenna)
Micro-SD	Up to 32 GB
Battery	Li-Ion, 1000 mAh
Max radiated power in the frequency bands in which the radio equipment operates	Bluetooth: 6.76 dBm (4.7 mW). GSM 900: 33 dBm (2 W) GSM 1800: 29.5 dBm (891 mW).

Package includes

Mobile phone – 1 pc

Battery – 1 pc

Charger – 1 pc


User Manual – 1 pc

Warranty card – 1 pc


Phone's appearance

1	Receiver
2	Up key
3	Left Soft Key (LSK)
4	Call/Receive a Call
5	Down key
6	Right Soft Key (RSK)
7	Hang up\Cancel\ (long press- to turn the phone on or off)

8	Camera
9	SOS key
10	Flashlight
11	USB-C port
12	Audio Jack
13	Speakerphone

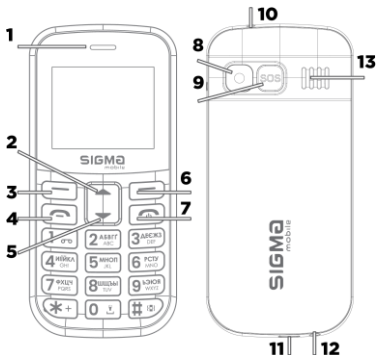

Inserting SIM cards and memory cards

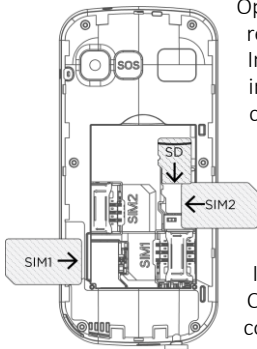

Open the battery cover,
remove the battery
Insert the SIM cards
into the
corresponding slots
according to the
pictures on the
phone.
Install a memory
card if necessary.
Install the battery.
Close the battery
compartment cover

Turning the phone on/off

To turn on/off the phone, press and hold the "Hang up" button for a while until the phone is turned on/off.








Keypad lock and unlock

Keypad lock: Pressing the Hang Up key, auto lock. Both options are enabled in Menu->Settings->Security.

 





Keypad unlock: Press LSK and then RSK




Button designations and functions

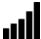	Functions
 Call button	Standby: View the call log. During an incoming call: Receive an incoming call. Call: To make a call to a dialed number.
 Hang up Button	Pressing: to reject a call on an incoming call, to lock the keypad in standby mode (if configured in the Menu—Security) Press and hold: To turn on/off the phone. In FM Radio Mode, Press: To exit the FM radio menu (with background playback).
 Left/Right Soft Keys	In the menu: press the keys to navigate to the desired menu or function. In call mode and when playing audio: To adjust the volume of the audio. Standby: Quickly switch to configured functions (shortcut keys)
 Left/Right Soft Keys	LSK: in standby mode- go to the Menu. To select options when configuring. RSK: In standby mode, go to Contacts; return to the previous menu. In FM radio mode to exit the FM radio menu
	Press and hold – activate the SOS function (the phone will automatically make an alternate call to the specified emergency numbers and send an SOS message)

0	Press: To dial "0". Press & Hold: Turn Flashlight On/Off
1-9	Press: to dial "1"... "9" Press & Hold (2-9): Speed dial (if configured)
*	Press: to dial "*", "+".
#	Press: To type "#". Press & Hold: Switch to Silent Mode/Normal Mode

Meaning of icons

<i>Icon</i>	<i>Meaning</i>
	Network Indicator
	Battery level
	Unread SMS
	Missed call
	Alarm On
	The "Silent" profile has been activated

	The "Meeting" profile has been activated
	The "Outdoor" profile has been activated
	Bluetooth Enabled

Basic operations

Making a call

Dial a phone number using your phone's numeric keypad or go to the call log and press the "Call" button to make a call.



You can also make a call from the "Contacts" menu by selecting the desired subscriber.

Speed Dial

Go to Menu-> Contacts-> Options-> Others-> Speed Dial.

In this menu, you can save eight phone numbers for speed dialing, corresponding to the numbers 2-9 on the phone keypad. Phone numbers can be entered or selected from the phone book. Pressing and holding one of the keys 2-9 in standby mode will call the specified number.

SOS dial

You can save up to 5 numbers for an emergency call. To enable the function, go to menu SOS->Settings. To add numbers, go to the menu to SOS->number list, to edit the message, select SOS message settings.

Pressing and holding the SOS button will make alternate calls (3 attempts) to the list of configured phone numbers. If none of the numbers answers, additional SMS will be sent.

Receiving a call

When a call comes in, press the Call button to receive an incoming call.

Press the Hang Up button if you want to reject an incoming call.



Filtering unwanted calls

The phone has the ability to set up a filter for unwanted calls, which consists of Blacklist (numbers that are included in the list will not be able to get through) or Whitelist (only those subscribers who are included in the list will be able to get through) lists. It is also possible to block calls from unknown callers – those whose numbers are not saved in the phone book. To set up, you need to go to *Menu->Settings->Security*.

Sound Mode

Melodies, volume and other parameters are configured in the settings of User Profiles (Menu->Settings->Profiles). You can adjust the volume of the

earpiece speaker during a call using the Up/Down keys.

Connecting to a PC

To copy files to/from a phone (provided that a memory card is installed), you need to connect to a personal computer. This connection requires a USB-A to USB-C cable (not included). Connect the cable to your phone and PC, select the USB drive option on the phone screen. On a PC, use standard tools for working with removable media.

Using the Phone Menu

To go to the menu, press the Menu key (LSK). To switch between items, press the Up/Down keys. The menu contains the following items

Call logs

Go to the Menu->Call Logs to view received, dialed and missed calls. For each call, the following actions are available in the Options menu: View details, Dial caller, Write a message, Add to contacts, Add to blacklist, Add to whitelist, Delete

Message

Incoming SMS messages

When a new message arrives, a melody will sound and an icon will appear at the top of the screen



To read the message you received, go to the Messages menu.

View messages through the Inbox menu.

Go to Menu->Message->Inbox. Select the message you want to view from the list using the navigation keys and press the 0 key (or Options->Read) to view the text of the message

Functional operations when viewing SMS:

Click Options and select the desired operation: Answer, Delete, Call, Forward, Move/Copy,

Add the sender to the phone book.

Write an SMS

Go to Menu->Message-> Write Message.

In the first line, enter the recipient's number from the keyboard, or by pressing the Options key, go to select the recipient from the phone book. Use the Down key to navigate to the text box. Enter the text of your message. Note: To change the input method when writing a message, press the "#" key. To send a message, click Options->Send. If you want to save the message without sending, click Options->Save.

Saving Sent Messages:

By default, sent messages are saved. If you don't want to save sent messages, go to the Messages-> Settings menu and turn off "Save sent". After activating this feature, sent messages will not be stored in the "Sent" folder.

Message settings

Go to the Message->SMS Settings menu to configure: SMS service center for each SIM, enabling/disabling the Delivery Report, setting up Voicemail, setting up the location of messages – SIM or phone.

Contacts

The phone book is used to save contacts, search for saved contacts, add new contacts, copy/move contacts from the phone to the SIM card and vice versa, set up speed dialing, etc. You can save 500 contacts in your phone.

Ways to save a new contact in the phone book:

1. Save dialed, received or missed number from the call log: in the call log, click Options->Add to contacts
2. Save a new contact directly through the "Contacts" menu: Menu->Contacts->Options->New

FM Radio

Attention! *In this model, FM radio functions with a built-in antenna. To improve the quality of reception, it may be necessary to connect a wired headset as an antenna. The sound of the FM radio and audio player is transmitted to an external speaker and a wired headset.*

To turn on the FM radio, go to the Menu->FM radio, press OK.

To exit the FM radio, press the "Exit" button.

To Play/Pause, use the 0 key.

To skip to the next/previous station, use the * and # keys respectively.

Use the Up/Down keys to adjust the volume. Click Options to automatically search and save channels, view the list of saved channels, enable/disable background playback, record radio programs, and view the archive of recordings

Multimedia

Attention: *it is advisable to perform the following functions in the "Multimedia" menu, provided that a memory card is installed.*

Camera

In the main menu, go to Multimedia-> Camera. With the Camera, you will be able to take photos and view photos. Press the 0 key to shoot. To go to settings, click Options

Image Viewer

From the main menu, go to Multimedia->Image. This menu allows you to view, send, delete, rename images and use them as a background.

Audio Player

To enable the audio player, go to the main menu in Multimedia->Audio.

You can use your phone's audio player to listen to music files that are stored on your phone's memory card.

Attention! *To create a playlist automatically, the files must be in the My Music folder on the memory card.*

Using the "Options" menu, you can play, add, edit the music list, as well as select the listening mode through the settings.

To Play/Pause, use the 0 key

To skip to the next/previous song, use the * and # keys respectively.

Use the Up/Down keys to adjust the volume

Recorder

In the main menu, go to Multimedia->Voice Recorder. Use the "Options" menu to select what you want: start a new recording, view existing recordings. You can also customize the file format and storage location.

Settings

Call settings.

Go to Settings->Call settings for Setup:

- DUAL SIMs: scenarios for using SIM cards; in this item, you can also set the name of the SIM card
- Call forwarding;
- Call barring;
- Call waiting;
- Auto-call recording (microSD card required)
- Turn on auto-dialer
- Reminder of the duration of the call
- Response by SMS

Phone Settings

The following options are available:

- Time and date;
- Language;
- Shortcut settings – menu items are configured for the Up/Down keys to quickly navigate to them in standby mode
- Automatic scheduled on/off
- Factory reset.

This function restores some mobile phone settings to their factory values. To use the factory reset function, you must enter the correct mobile phone password.

Attention! Reset Code - 1122

Display Settings

Display settings: wallpaper selection, brightness, and contrast. Adjust the backlight time of the display and keyboard.

Security

- Card blocking by PIN code: enabling/disabling the function, changing PIN;
- Lock your phone (on/off). When the function is turned on, each time the phone is turned on, a password will be asked; **Attention! The default password is 1122**
- Changing the phone lock password;
- Turn on the reset key lock
- Keypad auto-lock setting (Off/5s/15s/30s/1min/5min). To confirm your selection, press the Call key
- Setting up a blacklist of phone numbers – numbers from which calls will not be accepted
- Setting up a whitelist of phone numbers. Only callers from the white list will be able to get through.
- Setting up the Anti-Theft function. The function prohibits the phone from working when changing the SIM card. When setting it up for the first time, you need to enter a password that will be tied to the installed SIM. When changing the SIM, you will need to enter a password, without which the phone will not work.

Profiles

Go to the main menu and go to Settings-> Profiles. There are 5 pre-configured User Profiles: Normal, Silent, Meeting, Indoor, Outdoor. Each profile

contains settings for Ringtones and SMS, Volume of sounds, Other sounds: Keystroke sound, battery warning sound. To set up a profile, click Options->Settings.

To activate the profile, click Options->On.

Tools

Calendar

To go to the calendar menu, go to the main menu in Tools-> Calendar. You can create/view/edit events.

Alarm

In the main menu, go to – Tools-> Alarm.

In this menu, you can set 3 alarms by setting the time, melody and repeating mode: 1 time, daily, weekly. To edit, press the 0 key. To turn on/off, press LSC

Calculator

From the main menu, select Tools-> Calculator, which allows you to perform simple arithmetic operations. Enter a number and use the navigation keys to select the desired action.

The Tools menu also includes an e-book reader, Stopwatch, Timer, Torch, Bluetooth settings and operator services menu.

Possible problems and solutions

If you have problems using your phone, try to find a solution in this paragraph.

Problem	Causes and Solutions
---------	----------------------

Phone won't turn on	<p>Press and hold the end key until an image appears on the display.</p> <p>Check the battery contacts. Remove and insert the battery and turn the phone back on.</p> <p>Check the battery level.</p>
Can't connect to the network	<p>Find the best coverage area. You are out of network coverage.</p> <p>Contact your mobile service provider if your SIM card is invalid</p>
Poor sound quality when Conversation	<p>During a call, press the navigation key "Up" to increase the volume. Check the signal strength indicator on the display.</p>
Battery drains quickly	<p>If you don't have a network connection, your phone will continue to search for a network, so your device consumes a lot of battery and reduces waiting time. Find an area with a stronger signal or turn off your phone temporarily</p> <p>Install a new battery.</p>
SIM card error	<p>Make sure that the SIM card is not damaged.</p> <p>Make sure that the SIM card is installed correctly.</p> <p>Contact your mobile service provider if your SIM card is invalid</p>
Unable to make a call	<p>Make sure that the dialed number is available and that the call key has been pressed.</p> <p>Make sure you have enough money in your account.</p> <p>Make sure the SIM card is valid. Make sure that the fixed dial or deny call feature is not enabled.</p> <p>If this is the case, disable these features.</p>

Can't pick up a call	Make sure your phone is plugged in. Make sure the SIM card is valid. Check your call forwarding and outgoing call barring settings.
Battery won't charge	Make sure the battery pack is installed correctly. Securely connect the charger to your phone. Charge the battery in an environment where the temperature does not drop below 10 °C or rise above 55 °C . The battery or charger must be replaced.